
SpeedoHealer

Supplementary Manual



Suzuki GSX750F Katana 1998-2006 (SH-V4 + SH-S01)

Remove the seat.

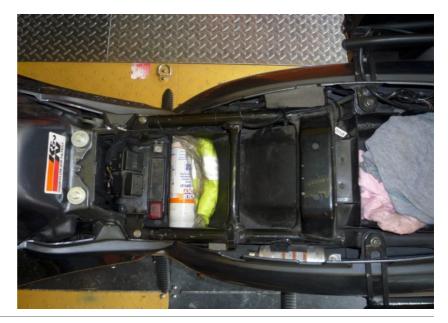


Keep from the frame or remove the left middle fairing.



Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

(Black, 3-pole connectors at the left side near the frame)

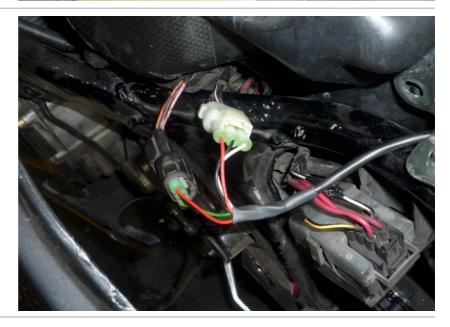

SpeedoHealerSupplementary Manual



Suzuki GSX750F Katana 1998-2006 (SH-V4 + SH-S01)

Typical position for the SpeedoHealer.

Secure the unit properly.

